


FUNCTIONS/FONCTIONS FUNKTIONEN/FUNCIONES/FUNZIONI

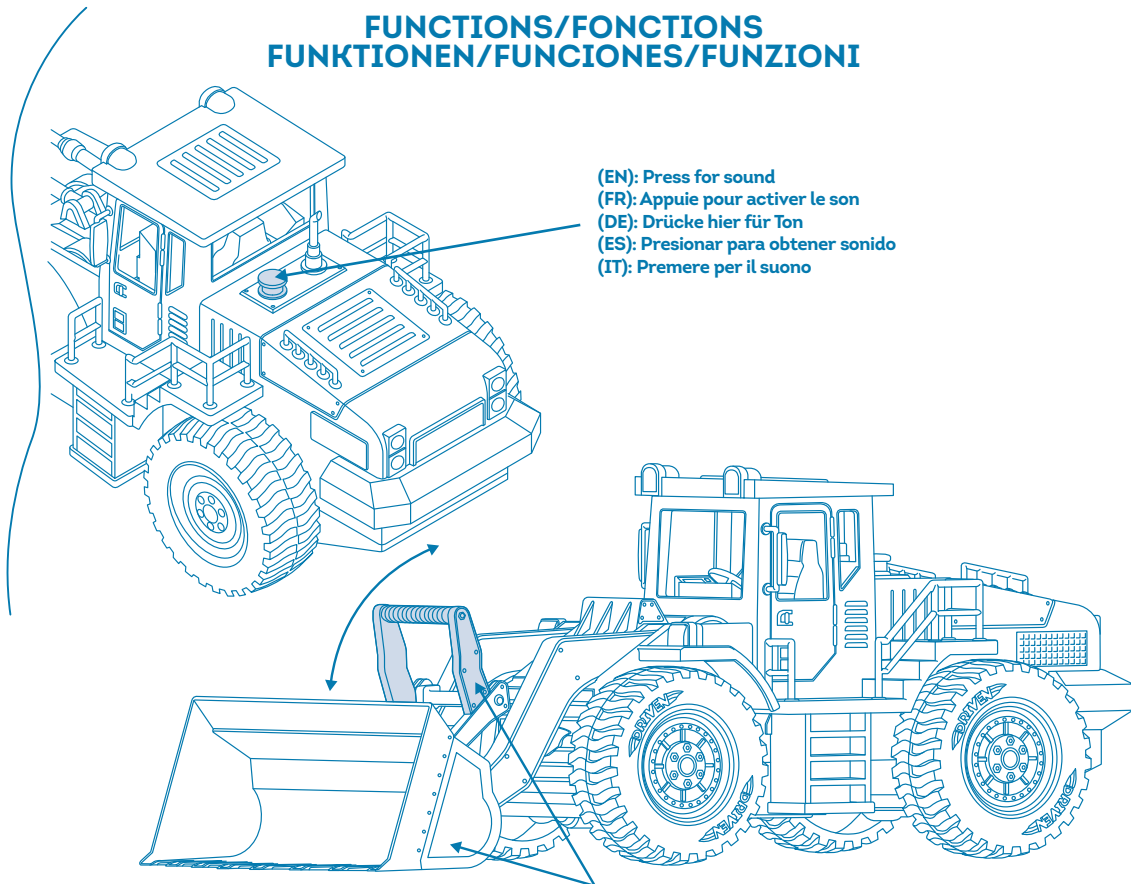

(EN): Press for sound
(FR): Appuie pour activer le son
(DE): Drücke hier für Ton
(ES): Presionar para obtener sonido
(IT): Premere per il suono

(EN): Push the handle back and forth to move the front bucket up and down.
(FR): Déplace la poignée vers l'avant et l'arrière pour soulever et abaisser le godet avant
(DE): Schiebe den Griff hin und her, um die vordere Schaufel auf und ab zu bewegen
(ES): Empujar el mango hacia adelante y hacia atrás para mover el cubo delantero hacia arriba y hacia abajo
(IT): Spingere la maniglia avanti e indietro per spostare la benna anteriore su e giù




WARNING: This product contains Button Cell Batteries. Button batteries are hazardous and can cause serious injuries if swallowed or placed inside any part of the body. Keep batteries away from children whether new or used. Dispose of used batteries immediately. If you think that batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

REPLACING BATTERIES REPLACEMENT DE PILES BATTERIEN AUSWECHSELN CAMBIO DE PILAS SOSTITUZIONE BATTERIE

Close
Fermer
Schließen
Cerrar
Chiudere

Open
Ouvrir
Öffnen
Abrir
Aprire

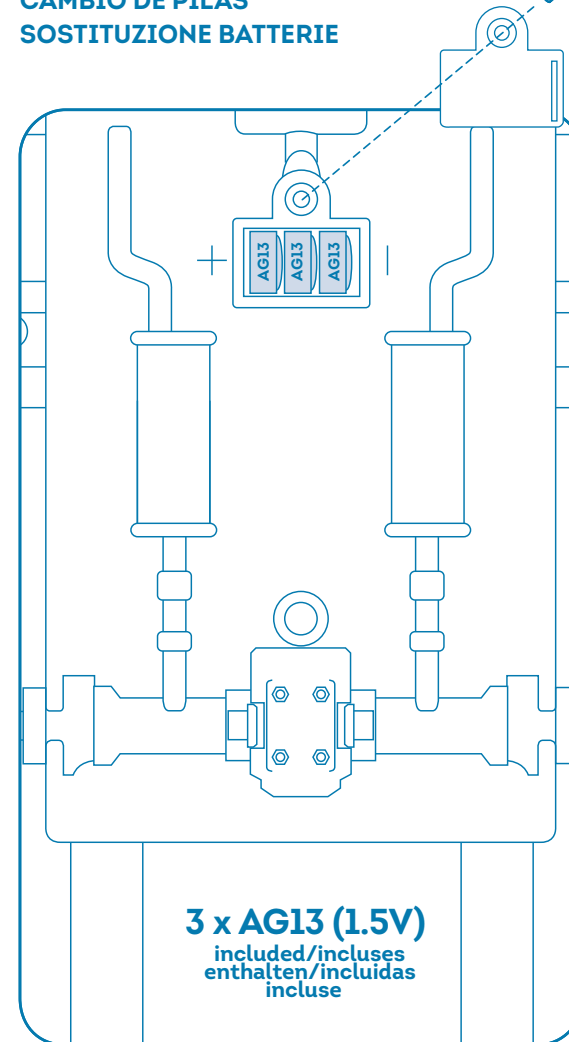

3 x AG13 (1.5V)
included/includes
enhalten/incluidas
include



